



# Dell Inspiron 1525 Wireless Mini-Card Replacement

Replace the Wireless Mini-Card in a Dell Inspiron 1525.

Written By: Miroslav Djuric



## INTRODUCTION

Use this guide to help you replace the Wireless Mini-Card in a Dell Inspiron 1525.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [Spudger](#) (1)
-



## Step 1 — Battery



- Locate the battery release switch on the bottom of the laptop.

## Step 2



- Slide the battery release switch away from the lock symbol until you hear the battery click.
- Slide the battery towards the back of the laptop until it comes free.




### Step 3 — Bottom Cover



- Remove/loosen the eight 4.80 mm Phillips #1 screws securing the bottom panel.
  - The screws may only need to be loosened, as they are generally retained by plastic washers.
- Remove the bottom panel.

### Step 4 — Wireless Mini-Card

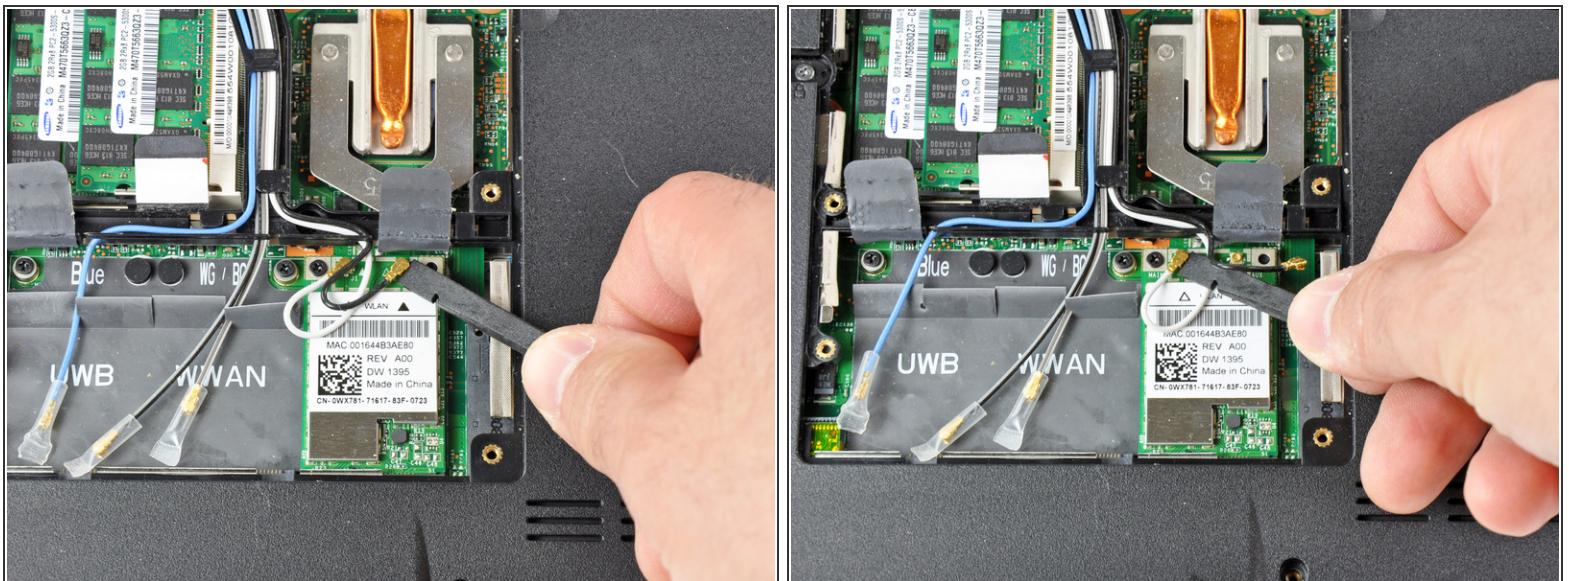

- Use the flat end of a spudger to gently pry the black and white antenna connectors off the Wireless Mini-Card.



## Step 5



- Remove the 3.70 mm Phillips #1 screw securing the card to the laptop.
  - ❗ The card will tilt up when you remove the screw.
- Slide the card straight out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 03:16:42 AM.